



# Motorola California Mobile Phone Teardown

This guide will walk through the teardown of the Motorola California Phone. This guide will start from a fully assembled device and end when the front casing of the device is alone.

Written By: Andrew Lam





## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Motorola California Mobile Phone Teardown



- Remove the battery by sliding it down the rails to which it is connected.

## Step 2



- Find a flat head or Phillips head screwdriver.
  - Insert the screwdriver into the holes in the plastic rod connecting the key pad guard to the rear casing.
  - Use the screwdriver to push the rods towards each other until they click out of their locked position.
- ⓘ Note: This may require a large amount of force.




## Step 3




- Slide off the antenna guard and locate the four clips on the exterior of the rear casing.
- Simultaneously push the clips outward while lifting the rear casing and keyguard away from the front casing.
- Remove the key guard from the rear casing by taking it out of its position.

## Step 4

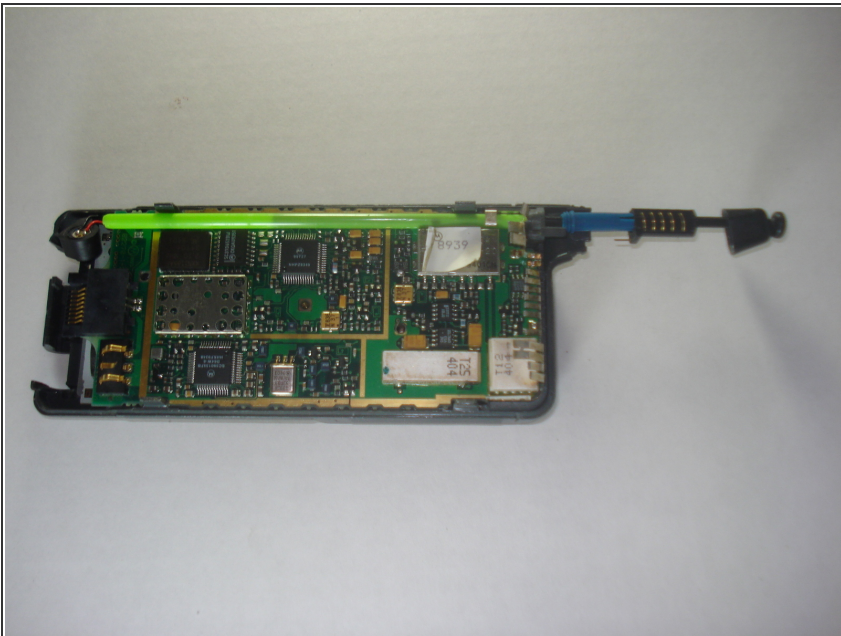


- Locate and unplug the black component of the antenna from the motherboard.
- Under the black component should be a blue component. Unscrew this component in order to free the antenna.

## Step 5

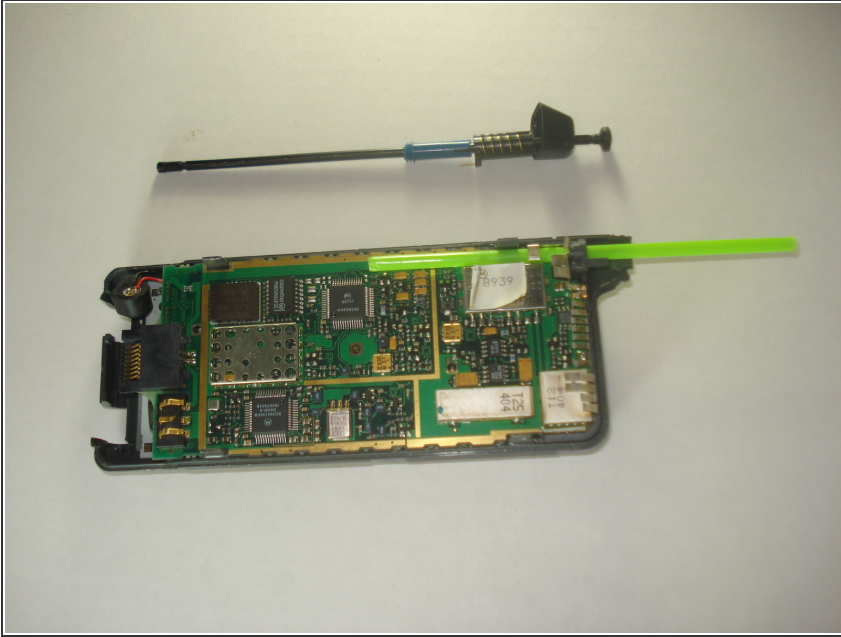

- Slide the antenna out of the green tubing and slide the green tubing out of its corresponding hole on the motherboard.

## Step 6

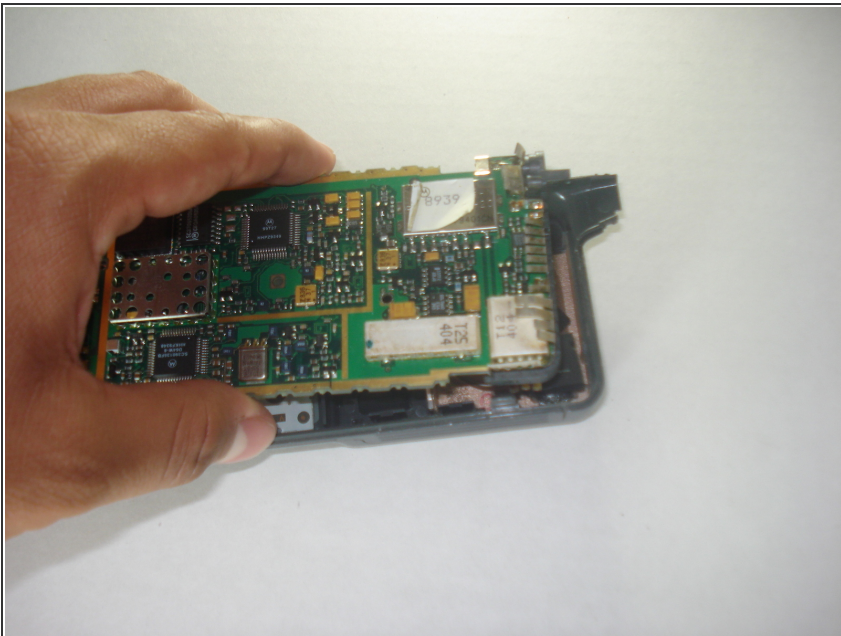

- Lift the motherboard out of its location in the front casing.
- ⚠ Do this slowly and gently so that none of the motherboard's components are damaged.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-10 01:38:25 AM.